



5ST3 011

5ST3 014

5ST3 040





5ST3 043

5ST3 044

5ST3 012

5ST3 015





5ST3 050

5ST3 020



Fault signal contacts (FC)



5ST3 021





5ST3 022





5ST3 030

5ST3 031

Shunt trips (ST)



Undervoltage releases (UR)



