



Fuse base D01 with terminal type BB

- Incoming feeder, clamp-type terminal B
- Outgoing feeder, clamp-type terminal B



Fuse base D02 with terminal type KS

- Incoming feeder, screw head contact K
- Outgoing feeder, saddle terminal S



Fuse base D02 with terminal type SS

- Incoming feeder, saddle terminal S
- Outgoing feeder, saddle terminal S