


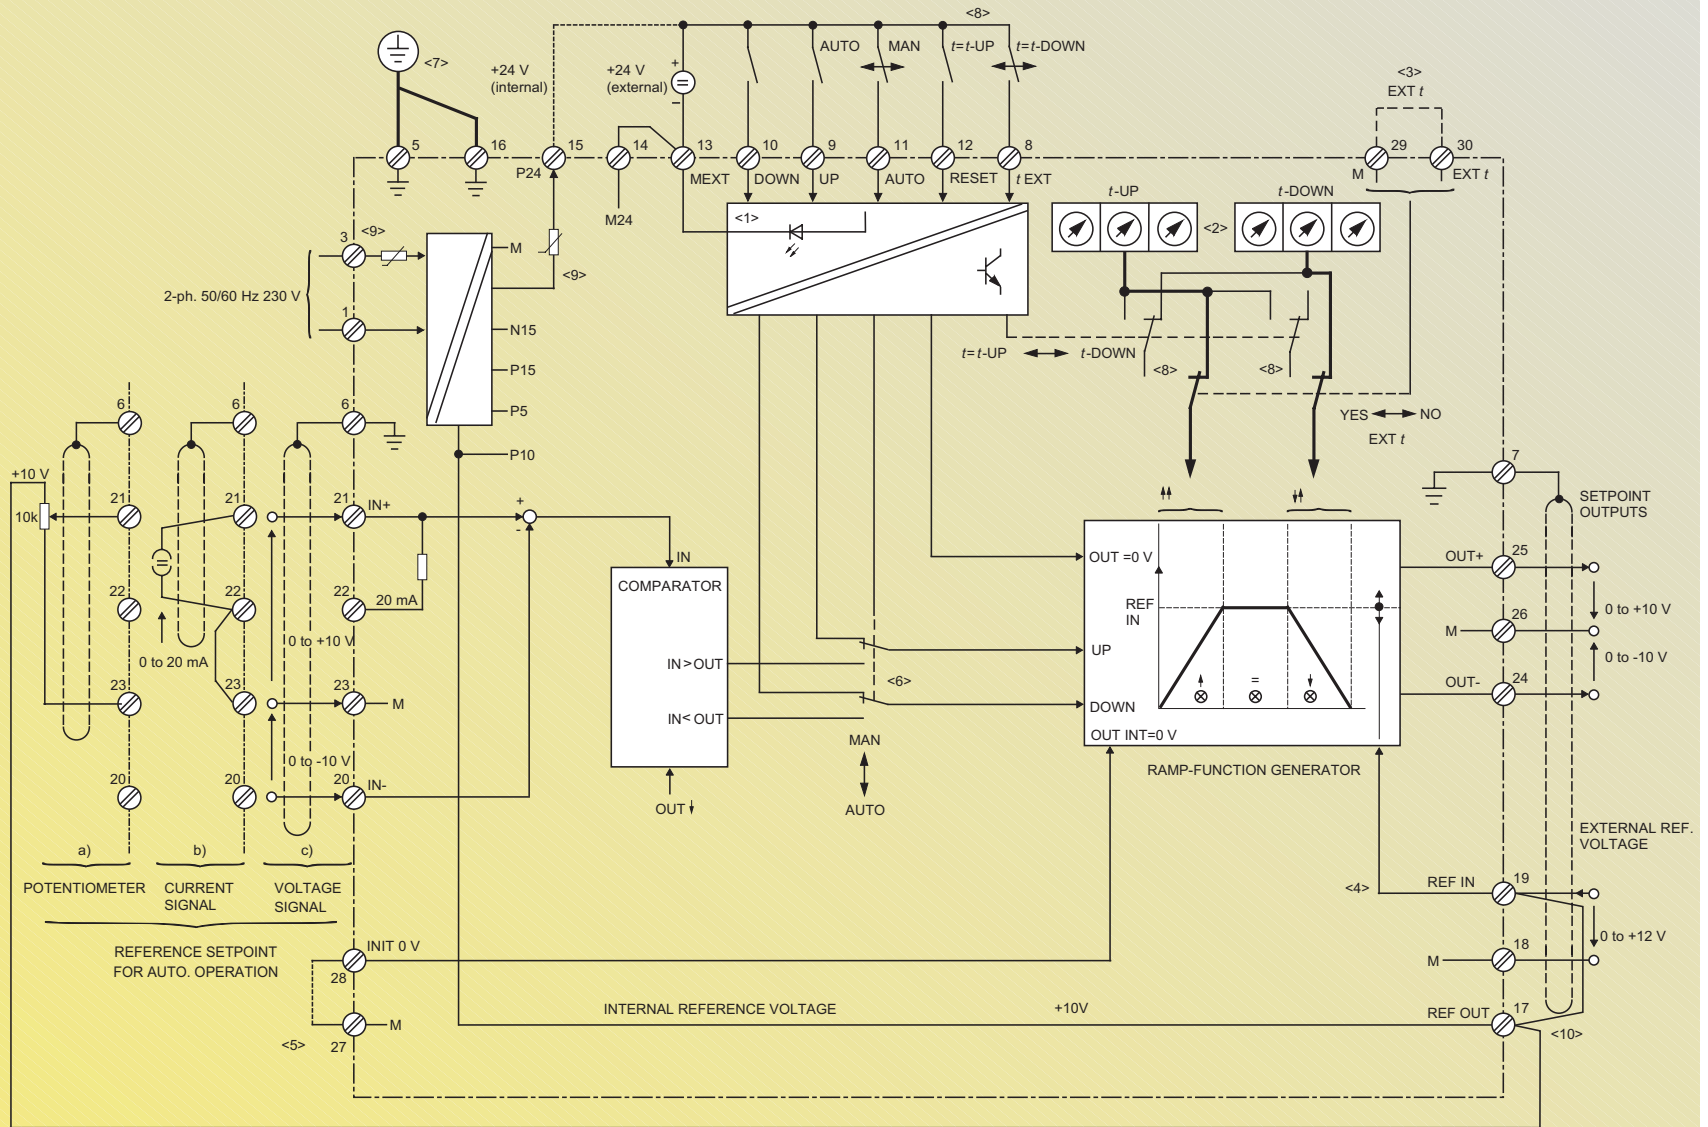

(1) Floating binary inputs

(2) Thumbwheel switch for ramp-up/ramp-down time in seconds

(3) This jumper activates the external ramp-up time changeover

(4) Reference voltage = max. ramp-function generator value

(5) This jumper resets the ramp-function generator to 0 V each time the 230 V supply voltage is switched on

(6) Ramp-up/ramp-down, manual or automatic

(7) Lowest-resistance ground connection

(8) External ramp time changeover

(9) Short-circuit protection with PTC thermistor

(10) Connect terminals 17 and 19 for operation with internal reference voltage

ADA21-5085b